

MARTINS

FURNITURE & FLOORING

Celebrity Reclining and Rising Chairs

Safety

Your reclining chair contains moving parts. It is necessary to exercise due care and attention when using Celebrity products.

The following points highlight areas which must be followed to help ensure the safety of yourself and others.

Do not allow children or babies to play with or on the chair, or leave children/babies unsupervised in the same room as a reclining/rising chair.



Celebrity

British Craftsmanship



As all action products contain moving parts, handle all items with care. Only move the product when it is in the 'rest' or 'closed' position. Never attempt to move the chair when it is in any of the open positions. Always use the arms to move the chair – do not use the back or wings. When moving an electrically operated chair, always unplug the mains lead. This will help avoid accidental trapping of the electrical leads.

Never leave the chair in the 'standing' position, always return to the 'rest' position after exiting the chair.



Please note that this product should never be used other than as a reclining chair – it is not a bed and should not be used as a substitute for a bed.




After use always return the product to the 'rest' or 'closed' position. Never position your Celebrity product close to a fire or source of heat. Do not leave a lit cigarette resting on the arm or any part of the product.

Do not place the chair too close to the wall as this can seriously damage the motor should the chair be restricted in its operation.



Only use the transformer unit supplied by Celebrity with the chair. Do not use any other make of transformer as this can result in irreparable damage to the motor. Do not tamper with the sealed transformer.

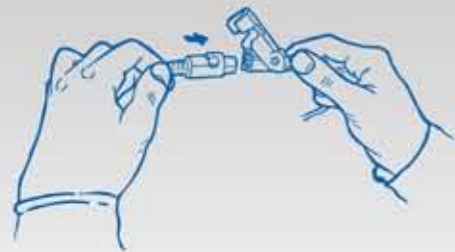

chair incorporates a sprung-loaded footrest. Should the footrest hit an obstruction on closing, it will pivot as shown to reduce pressure.

The motor will continue to function until the action cycle is finished when it will automatically stop.

To prevent accidental or unauthorised use, each electrically powered, handset operated, chair incorporates a quick release feature. This is usually found on the lead inside the pocket at the side of the chair. Always detach the handset and store in a safe position out of the reach of children to prevent unauthorised or unsupervised use of the chair.



As all the actions contain moving parts, never attempt to repair or adjust the action mechanism yourself. Contact your local retailer for any service issues. Always ensure all electrical supply wires are free from obstruction and not twisted or trapped in any way. If any wires are damaged, always have them replaced by a qualified electrician.

Do not sit on the arms of the product or on the footrest when it is in the 'open' position.



To prevent accidental damage or trapping when the footrest closes, each electrically powered



Never lean to an excessive degree over the side or front of the chair as this could cause the chair to tilt.

Never attempt to reach for anything around the chair as excessive leaning could cause the chair to tilt.

In particular a reclined chair can tip forward if you reach too far forward when in the sitting position the chair in the lift position will, due to its raised centre of gravity, be more susceptible to tipping than a fully closed chair.

Always get out of the chair to retrieve any articles around the chair.



Do not lean forward when the footrest is in the 'open' position, as this could cause the chair to tip forward.



Always ensure that no objects are left under the chair. As with any piece of action furniture there is always the possibility that any loose item can interfere with the moving parts of the chair.